


 **GREE**
AIR CONDITIONER



*Aoky
Window/Wall
Air Conditioner*

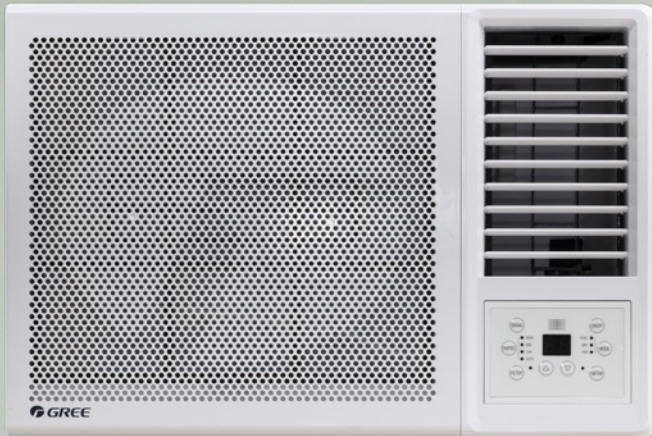

Find out more at www.greeac.com.au



Wireless Remote Control

- **Auto**
Operation is selected based on current room temperature.
- **Cooling plus Energy Saver Mode**
Energy saver mode switches the fan off once the air conditioner has reached the set point of the thermostat.
- **Drying/Dehumidifying**
- **Heating**
- **Fan Only**




New Smart Generation WiFi Control

Wi-Fi is now available on all models of the new AOKY range of window wall units in both Apple and Android. After installing the “Gree+” App (V 1.9.1 or later) onto your phone or tablet, you can remotely control the air conditioner from anywhere in the world. No additional parts or wiring as Wi-Fi comes factory fitted and available at no extra charge.

While providing remote control access to your air conditioner, the new Wi-Fi chip also records the last 30 minutes of running parameters of your air conditioner. This will allow service personal to view the operating parameters of the unit in the event that the unit faults, thus speeding up fault diagnosis and repair.

Gree Wi-Fi works on 2.4Ghz only, please allow for this on your modem.

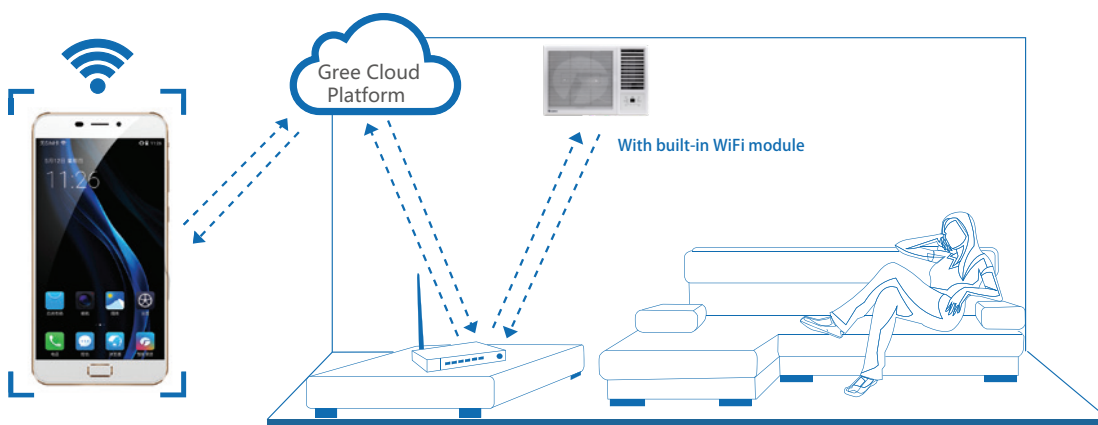



Features

- **3-Speed Fan, with Auto Mode**
In auto the fan speed automatically adjusts as the room temperature changes.
- **Fresh Air Ventilation**
Adjust the slider to ventilate and expel smoke and odours from the room.
- **Anti-Corrosion Protection Features**
Hydrophilic Blue Fin Coils. Galvanised and painted slide out chassis.
- **Digital Display with On/Off Button**
If the remote is lost the air conditioner can be run via the digital control panel on the unit. The unit display can be turned off via the remote control.
- **Self-Diagnostics**
In the unlikely event of a malfunction, the malfunction code will be displayed aiding a speedy repair.
- **Check Filter Indicator**
This feature is a reminder to clean the filter for more efficient operation. The LED light will illuminate after 250 hours of operation.
- **Auto Swing Air Direction**
When the swing button is pressed on the remote control the air direction louvers will start to rotate automatically. Press the swing button again to stop and set at the desired direction.
- **Clock with On/Off Timer**
The clock must be set on the remote control to enable the timer to be set to come on or turn off at a certain time.
- **Sleep Function**
The sleep function changes the set point temperature after one and then two hours. This follows a more natural sleep pattern.



3D Airflow



Comfortable Sleep Curves



Fresh Air Supply Ventilation



Cold Air Prevention



Timer



Self-diagnosis



Auto Restart



Automatic Operation



Wifi Control *2

Model		GJH09AK-K6NRNG2A	GJH12AG-K6NRNG1A	GJH18AE-K6NRNG1A	GJH21AE-K6NRNG1A
Part Number		AC5056	AC5057	AC5058	AC5059
Performance					
Cooling Capacity	kW	2.75	3.9	5.3	6.0
Heating Capacity	kW	2.45	3.6	4.8	5.5
Cooling Power Input	W	825	1180	1600	1810
Heating Power Input	W	740	1060	1450	1690
AEER	W/W	3.33	3.31	3.31	3.31
ACOP	W/W	3.31	3.40	3.31	3.26
Cooling Energy Stars	Nos	2	2	2	2
Heating Energy Stars	Nos	2	2	2	2
Dehumidifying Volume	L/hr	1.0	1.5	2.2	2.2
Air Flow Volume(Max)	L/sec	133	183	217	233
SPressureL (L/H) Ind	dB (A)	46/50	46/50	51/55	52/56
SPowerL (L/H) Ind	dB (A)	56/60	56/60	61/65	62/66
SPressureL (L/H) Out	dB (A)	53/57	56/60	59/63	60/64
SPowerL (L/H) Out	dB (A)	63/67	66/70	69/73	70/74
Electrical					
Power Supply		220-240/50hz/1ph - Indoor			
Recommended Circuit Breaker	A	10	10	15	15
Cooling / Heating	A	3.6/3.3	5.1/4.5	7.0/6.3	7.9/7.4
Dimensions and Weights					
Dimension (W×H×D)	mm	560x375x670	660x428x700	660x428x770	660x428x770
Net Weight	kg	40	51	64	65
Installation					
Operating Temperature Range	°C	-7~43	-7~43	-7~43	-7~43
Refrigerant		R32	R32	R32	R32
Refrigerant Charge	kg	0.6	0.86	1.08	1.05

Notes:

Above parameters are for reference only. Actual parameter may vary. Heating and cooling capacities are based on AS/NZ 3823.1.1. Running current is rated at AS/NZ 3823.1.1 standards and does not include compressor start-up or power supply variations. Failure to comply with relevant Government regulations may void the warranty. Due to continuous product improvements, specifications are subject to change without prior notice. 6 year warranty is for domestic installs only, 2 years for commercial and portable building installations.



For Installation and Sales:

For Parts and Warranty:

GREE
AIR CONDITIONER

www.greeac.com.au

1800 GREE 4 ME
1800 4733 4 63